

Nikon D7100/D7200 Kneebord Checklist

- ▶ **CHARGE AND/OR CHANGE ALL BATTERIES (CAMERA, GMAX, BAD ELF)**
- ▶ **ASSEMBLE (AND CLEAN IF REQUIRED) ALL PARTS**
- ▶ **SET THE SWITCHES ON CAMERA BODY AND LENS**
 - Camera Body **Focus selector lock**-White dot on **L**
 - Camera Body **Live view selector**-White dot on **still camera** position
 - Camera Body **Focus Mode selector**-White line on **AF** position
 - Lens **Lock switch** to **Unlock**
 - Lens **AF/M switch** to **AF** (autofocus)
 - Lens **OS switch** to **ON** (vibration reduction)
 - Lens **Normal/Active switch** to **Active** (if Nikon lens)
- ▶ **CAMERA POWER SWITCH TO ON**
- ▶ **SET UP CAMERA VIEWFINDER (DIOPTER)**
 - Use **diopter adjustment control** for your eye
 - Press **shutter button** to check for focus point
- ▶ **SET CAMERA ITEMS NOT AFFECTED BY DEFAULTS**
 - Rotate **Exposure Mode Dial** to **Automatic/NoFlash**
 - Or
 - Rotate **Exposure Mode Dial** to **Scene**
 - Rotate **Main Command Dial** to show **Sports** on the INFO (LCD) screen
 - Rotate **Release Mode Dial** to **S** (single frame).
- ▶ **SET CAMERA DEFAULTS (3 TOTAL)**
 - Set Two Button Defaults - [Simultaneously press and hold **Two Green Buttons** until top screen flashes]
 - Set Shooting Menu Defaults - [Menu→Photo Shooting Menu→**Reset Photo Shooting Menu**→OK→Yes→OK]
 - Set Custom Settings Defaults - [Menu→Custom Settings Menu→**Reset Custom Settings** →OK→Yes→OK]
 - Change Image Quality to JPEG Fine - [Menu→Photo Shooting Menu→Image Quality→OK→**JPEG Fine**→OK]
 - Format the camera media cards (**2 TOTAL**) - [Menu→Setting→Format Memory Card→OK→**Slot 1 or 2**→OK]
- ▶ **SOLMETA GMAX SETTINGS AND CALIBRATION (AS REQUIRED)**
- ▶ **BAD ELF SETTINGS AND CALIBRATION (AS REQUIRED)**
- ▶ **CHECK SETTINGS AND OPERATIONS/TEST SHOTS**

12 June 2022

Nikon D7100/D7200 Kneebord Checklist

- **CHARGE AND/OR CHANGE ALL BATTERIES (CAMERA, GMAX, BAD ELF)**
- **ASSEMBLE (AND CLEAN IF REQUIRED) ALL PARTS**
- **SET THE SWITCHES ON CAMERA BODY AND LENS**
 - Camera Body **Focus selector lock**-White dot on **L**
 - Camera Body **Live view selector**-White dot on **still camera** position
 - Camera Body **Focus Mode selector**-White line on **AF** position
 - Lens **Lock switch** to **Unlock**
 - Lens **AF/M switch** to **AF** (autofocus)
 - Lens **OS switch** to **ON** (vibration reduction)
 - Lens **Normal/Active switch** to **Active** (if Nikon lens)
- **CAMERA POWER SWITCH TO ON**
- **SET UP CAMERA VIEWFINDER (DIOPTER)**
 - Use **diopter adjustment control** for your eye
 - Press **shutter button** to check for focus point
- **SET CAMERA ITEMS NOT AFFECTED BY DEFAULTS**
 - Rotate **Exposure Mode Dial** to **Automatic/NoFlash**
 - Or
 - Rotate **Exposure Mode Dial** to **Scene**
 - Rotate **Main Command Dial** to show **Sports** on the INFO (LCD) screen
 - Rotate **Release Mode Dial** to **S** (single frame).
- **SET CAMERA DEFAULTS (3 TOTAL)**
 - Set Two Button Defaults - [Simultaneously press and hold **Two Green Buttons** until top screen flashes]
 - Set Shooting Menu Defaults - [Menu→Photo Shooting Menu→**Reset Photo Shooting Menu**→OK→Yes→OK]
 - Set Custom Settings Defaults - [Menu→Custom Settings Menu→**Reset Custom Settings** →OK→Yes→OK]
 - Change Image Quality to JPEG Fine - [Menu→Photo Shooting Menu→Image Quality→OK→**JPEG Fine**→OK]
 - Format the camera media cards (**2 TOTAL**) - [Menu→Setting→Format Memory Card→OK→**Slot 1 or 2**→OK]
- **SOLMETA GMAX SETTINGS AND CALIBRATION (AS REQUIRED)**
- **BAD ELF SETTINGS AND CALIBRATION (AS REQUIRED)**
- **CHECK SETTINGS AND OPERATIONS/TEST SHOTS**

22 June 2022