

## Nikon D7100/D7200 Kneebord Checklist

- CHARGE AND/OR CHANGE ALL BATTERIES (CAMERA, GMAX, BAD ELF)
- ASSEMBLE (AND CLEAN IF REQUIRED) ALL PARTS
- SET THE SWITCHES ON CAMERA BODY AND LENS
  - Camera Body **Focus selector lock**-White dot on **L**
  - Camera Body **Live view selector**-White dot on **still camera** position
  - Camera Body **Focus Mode selector**-White line on **AF** position
  - Lens **Lock switch** to **Unlock**
  - Lens **AF/M switch** to **AF** (autofocus)
  - Lens **OS switch** to **ON** (vibration reduction)
  - Lens **Normal/Active switch** to **Active** (if Nikon lens)
- CAMERA POWER SWITCH TO **ON**
- SET UP CAMERA VIEWFINDER (DIOPTER)
  - Use **diopter adjustment control** for your eye
  - Press **shutter button** to check for focus point
- SET CAMERA ITEMS NOT AFFECTED BY DEFAULTS
  - Rotate **Exposure Mode Dial** to **Automatic/NoFlash**
  - Rotate **Release Mode Dial** to **S** (single frame).
- SET CAMERA DEFAULTS (3 TOTAL)
  - Set Two Button Defaults - [Simultaneously press and hold **Two Green Buttons** until top screen flashes]
  - Set Shooting Menu Defaults - [Menu→Photo Shooting Menu→**Reset Photo Shooting Menu**→OK→Yes→OK]
  - Set Custom Settings Defaults - [Menu→Custom Settings Menu→**Reset Custom Settings** →OK→Yes→OK]
  - Change Image Quality to JPEG Fine - [Menu→Photo Shooting Menu→Image Quality→OK→**JPEG Fine**→OK]
  - Format the camera media cards (**2 TOTAL**) - [Menu→Setting→Format Memory Card→OK→**Slot 1 or 2**→OK]
- SOLMETA GMAX SETTINGS AND CALIBRATION (AS REQUIRED)
- BAD ELF SETTINGS AND CALIBRATION (AS REQUIRED)
- CHECK SETTINGS AND OPERATIONS/TEST SHOTS

## Nikon D7100/D7200 Kneebord Checklist

- CHARGE AND/OR CHANGE ALL BATTERIES (CAMERA, GMAX, BAD ELF)
- ASSEMBLE (AND CLEAN IF REQUIRED) ALL PARTS
- SET THE SWITCHES ON CAMERA BODY AND LENS
  - Camera Body **Focus selector lock**-White dot on **L**
  - Camera Body **Live view selector**-White dot on **still camera** position
  - Camera Body **Focus Mode selector**-White line on **AF** position
  - Lens **Lock switch** to **Unlock**
  - Lens **AF/M switch** to **AF** (autofocus)
  - Lens **OS switch** to **ON** (vibration reduction)
  - Lens **Normal/Active switch** to **Active** (if Nikon lens)
- CAMERA POWER SWITCH TO **ON**
- SET UP CAMERA VIEWFINDER (DIOPTER)
  - Use **diopter adjustment control** for your eye
  - Press **shutter button** to check for focus point
- SET CAMERA ITEMS NOT AFFECTED BY DEFAULTS
  - Rotate **Exposure Mode Dial** to **Automatic/NoFlash**
  - Rotate **Release Mode Dial** to **S** (single frame).
- SET CAMERA DEFAULTS (3 TOTAL)
  - Set Two Button Defaults - [Simultaneously press and hold **Two Green Buttons** until top screen flashes]
  - Set Shooting Menu Defaults - [Menu→Photo Shooting Menu→**Reset Photo Shooting Menu**→OK→Yes→OK]
  - Set Custom Settings Defaults - [Menu→Custom Settings Menu→**Reset Custom Settings** →OK→Yes→OK]
  - Change Image Quality to JPEG Fine - [Menu→Photo Shooting Menu→Image Quality→OK→**JPEG Fine**→OK]
  - Format the camera media cards (**2 TOTAL**) - [Menu→Setting→Format Memory Card→OK→**Slot 1 or 2**→OK]
- SOLMETA GMAX SETTINGS AND CALIBRATION (AS REQUIRED)
- BAD ELF SETTINGS AND CALIBRATION (AS REQUIRED)
- CHECK SETTINGS AND OPERATIONS/TEST SHOTS