

Airborne Digital Reconnaissance System (ADRS)

Nikon D7200 Camera Kit

Shipping and Storage Checklist




V2.0

June 2023

National Headquarters, Civil Air Patrol
Advanced Technology Group

1.0 Equipment Pre-Mission Check

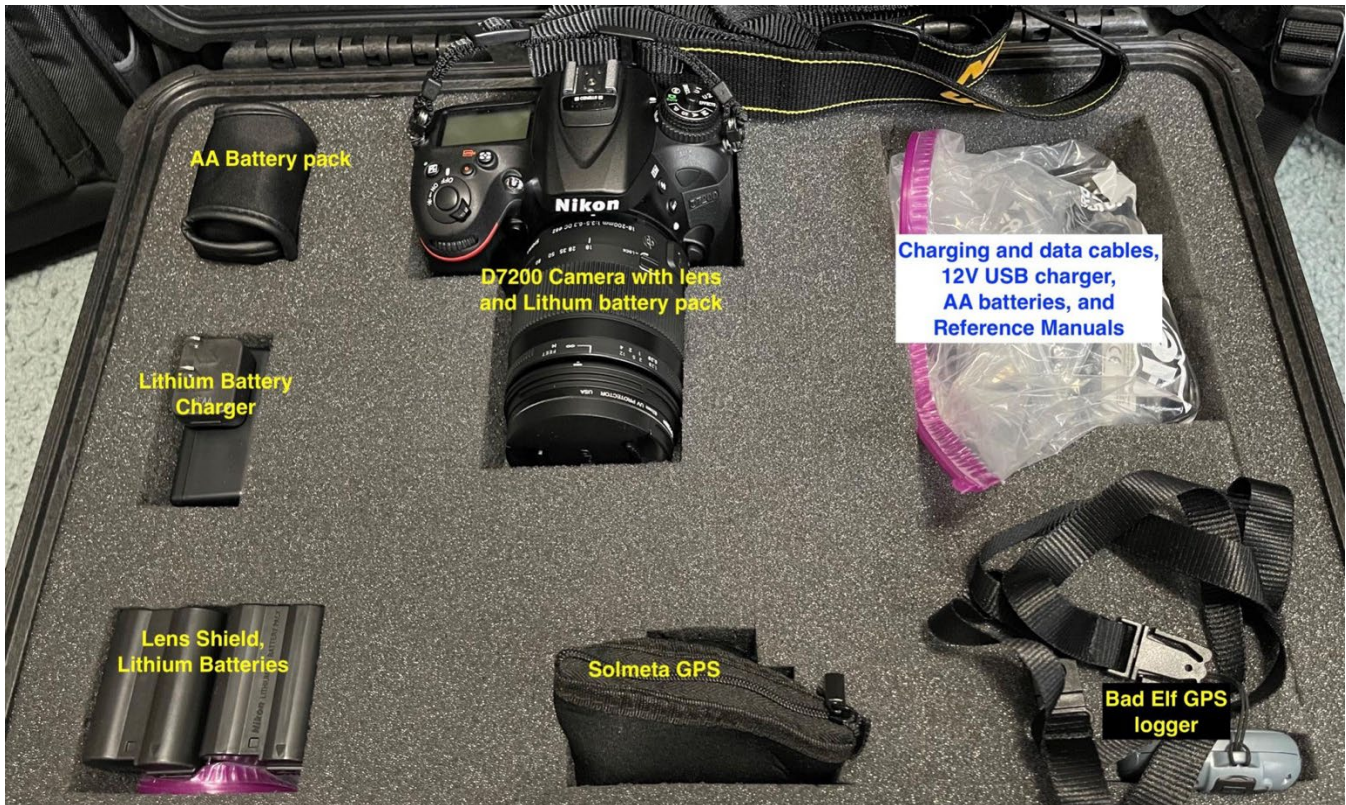

1.1 Open the ruggedized camera case and verify the following items are enclosed:

- Nikon D7200 camera with attached Sigma 18-200 mm stabilized lens
- Nikon lens cap
- Nikon MB-D15 Multi-Power Battery Pack with battery fixture for rechargeable battery
- Nikon Camera strap
- Nikon MH-25a battery charger
- Nikon USB data cable from camera to computer
- 62mm UV optical filter/lens protector
- 2 Sandisk (or equivalent) 16 GB SDHC memory cards (stored in camera)
- 2 Rechargeable camera batteries (one used in camera, one in battery pack)
- User manuals for the camera and attachments
- Camera to computer cable
- 6 AA battery fixture for use with the D15 Multi-Power Battery Pack (back-up camera power module with batteries installed) in fabric carrying case
- Spare AA batteries in gallon-sized Ziploc bag
- Solmeta GMAX camera geotagger
- Solmeta GMAX data cable from GMAX to camera
- Solmeta GMAX charging cable from GMAX to USB
- Bad Elf GPS PRO+ Bluetooth GPS data tracker
- Miscellaneous quart-sized Ziploc bag of Nikon lens shield, Solmeta cables, 12v vehicle charging adapter and cable & other parts, covers, etc. which may be of use on other missions

Photos on the next page help with identification of components.

Photos of equipment located in the System Case



Camera with attachments



Battery pack



Lens Cover Lens Shield

Note: lens shield not used



2 SD Cards



Battery charger and battery



Second battery



AA battery fixture



Nikon/Computer
USB data cable



GMAX GPS for camera



GMAX USB charging cable



Bad Elf, USB charging cable
and 12V USB charger



6 AA batteries



Spare Parts in Small Ziplock Bag